

MODEL 38-PV-PRD

3/8" PILOT VALVE PRESSURE REDUCING


(See Page 5 for Models used on)



ITEM NO.	ITEM NUMBER	DESCRIPTION	QUANTITY
1	PV-PRD-3A	ACV PILOT ADJ BOLT CAP	1
2	PV-PRD-11	ACV PILOT ADJ BOLT	1
3	501B-9SS	NUT, 3/8-16 ST/STEEL	1
4	3707-11C	SCREW, 10-32-5/8 SS CAP	8
5	PV-RLF-A-1	PILOT BELL	1
6	PV-PRD-80A	ACV PILOT SPRING DISC	1
7	BR2-33XL	ACV PILOT SPRING 5-25 PSI	1
	603-33SS	ACV PILOT SPRING 15-75 PSI	1
	PV-PRD-33-200	ACV PILOT SPRING 20-200 PSI	1
	PV-PRD-33-300	ACV PILOT SPRING 30-300 PSI	1
8	PV-PRD-9	ACV PILOT STEM NUT	1
9	PV-PRD-14	ACV PILOT STEM LOCK WASHER	1
10	PV-PRD-80	ACV PILOT DIAPHRAGM DISC	1
11	PV-PRD-43	ACV PILOT DIAPHRAGM	1
	PV-PRD-43V	ACV PILOT DIAPHRAGM, VITON	1
12	011N	O-RING, NSF	1
	011V	O-RING, VITON	1
13	PV-PRD-5	ACV PILOT STEM/YOKE	1
14	PV-PRD-1	ACV PILOT BODY	1
15	PV-PRD-18	ACV PILOT SEAT	1
16	PV-PRD-340	ACV PILOT PLUNGER SEAL RING	1
	PV-PRD-340V	ACV PILOT PLUNGER SEAL RING, VITON	1
17	WK-018N	O-RING, FDA	1
	018V	O-RING, VITON	1
18	PV-PRD-3	ACV PILOT MAIN CAP	1
19	TPV-PRD-175	TAG, PRESSURE REDUCING PILOT 50-175 UL	1
	TPV-PRD-200	TAG, PRESSURE REDUCING PILOT 20-200 PSI	1
	TPV-PRD-300	TAG, PRESSURE REDUCING PILOT 30-300 PSI	1
	TPV-BLANK	TAG, BLANK PRESSURE RELIEF	1

- | | | | | | | | |
|--------------|---------------|---------------|---------------|----------------|----------------|-----------------|-----------------|
| 38-PV-PRD-25 | 38-PV-PRD-175 | 38-PV-PRD-200 | 38-PV-PRD-300 | 38-PV-PRD-25-V | 38-PV-PRD-75-V | 38-PV-PRD-200-V | 38-PV-PRD-300-V |
|--------------|---------------|---------------|---------------|----------------|----------------|-----------------|-----------------|

	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●				●			
						●		
		●	●				●	
				●				●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●				
					●	●	●	●
	●	●	●	●				
					●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	●	●
	●	●	●	●				
					●	●	●	●
	●	●	●	●				
					●	●	●	●
	●	●	●	●	●	●	●	●
		●						
			●				●	
				●				●
	●				●	●		

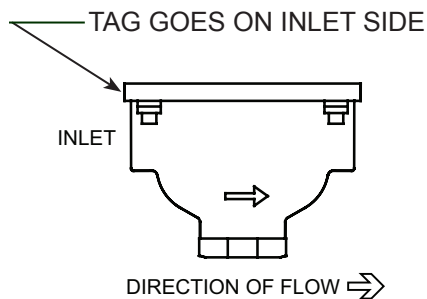

-
- Exploded view diagram of a pump assembly. The components are numbered 1 through 19. The diagram shows the following parts:
- 1: Motor or actuator assembly.
 - 2: Long vertical shaft or pin.
 - 3: Hexagonal nut.
 - 4: Eight small screws or pins.
 - 5: Main pump body with a flange.
 - 6: Thin circular disc or washer.
 - 7: Coiled spring.
 - 8: Small cylindrical component.
 - 9: Small circular component with a star-shaped hole.
 - 10: Large circular flange or cover plate.
 - 11: Large circular flange or base plate.
 - 12: Small circular washer or spacer.
 - 13: Vertical shaft or pin with a flange.
 - 14: Main pump housing or casing.
 - 15: Small cylindrical component.
 - 16: Small cylindrical component.
 - 17: Small circular washer or spacer.
 - 18: Hexagonal nut.
 - 19: A bracket or arm attached to the side of the main pump body (5).