



Transfer Shower Floors

With Fit-Flo™ Drain

Manufactured from Veritek®
(See page 2 for detailed information.)

Veritek® SHOWER FLOORS

WARRANTY

Limited Lifetime – Residential
Limited 5-year – Commercial

FEATURES



- Will not mold or mildew, no grout to clean.
- Coordinates with Swanstone or Veritek® shower and bath systems.
- “S” pattern molded into floor provides a slip-resistant surface.
- Made of Veritek® with no surface coating to chip or crack.



Universal Design

Model	Nominal Size	Rough-In Dimensions			
		38"	37"	19"	18-1/2"
FTS-3738	37" x 38"	38-3/8"	37-3/16"	19-3/16"	18-9/16"
Shower Transfer Floor					

IMPORTANT: Rough-in dimensions are provided for reference only. You must measure the actual shower floor and check local building code requirements before construction of the stud wall.

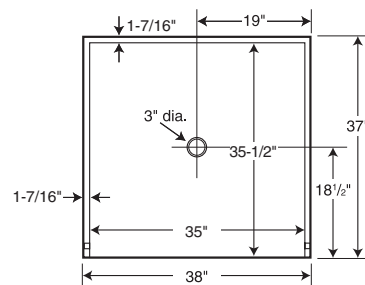

SPECIFICATIONS

Transfer Shower Floors With Fit-Flo™ Drain

Model	Part	Nominal Size Dimensions	Ship Wt. Lb.	Ship FedEx	Carton Dims. In.	Cu. Ft.
FTS-3738	FF03738MD	37" D x 38" W (940 mm x 965 mm)	46	—	45 x 43 x 10	12

Includes: One code-approved compression-molded Veritek® shower floor with molded-in Fit-Flo drain and installation instructions.

Packaging: Each floor packed in a rectangular carton.

COLORS

(See inside back cover for color sample.)

- White (010)
- Bone (037)
- Bisque (018)
- Bright White (137)
- Pearl (138)

ACCESSORIES

See page 101 for complete listing of all Universal Design accessories.

STANDARDS AND RATINGS

American National Standard Institute—ANSI Z124.1.2

International Association of Plumbing and Mechanical Officials (IAPMO)—Listed

CSA Standard B45.5 by IAPMO

Uniform Plumbing Code (UPC)

For a complete list of tests and results see the Technical Data Sheet – page 175.

SUPPORT DOCUMENTS

Installation instructions available at swanstone.com.

MADE IN USA

MAINTENANCE AND CLEANING INFORMATION

Clean regularly with common household liquid cleaners and a sponge or soft cloth. For hard water stains, scale removers can be used. If necessary, abrasive cleaners can be used with a nylon brush or pad to remove build up on the shower floor surface. **Do not** use a metal-scouring pad or a wire brush, as it will damage the surface. **Do not** use “leave on” cleaning products, such as automatic spray shower cleaners. Prolonged contact with harsh chemicals could have an adverse reaction over time and discolor surfaces. **Do not** use cleaning agents that caution use on acrylic, polyester or plastics.