


**Installation Procedure for** 

**MODEL DIT SELF-RIMMING DROP-IN TUB** 

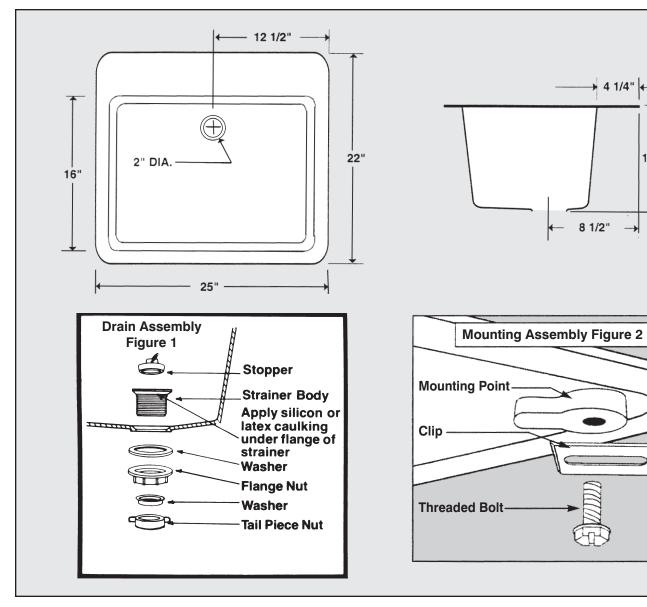

## Read ALL instructions carefully BEFORE starting your installation **SELF-RIMMING DROP-IN TUB - CAPACITY 17.50 GALLONS**

- 1. Measure and cut counter hole for tub insertion 23-5/8" wide x
- 2. After test fitting tub, remove from counter hole and install faucet (not included) and drain assembly (see Figure 1).

Helpful Hint .... for easy installation of final supply line connections, it is suggested that, if possible, plumbing connection to faucet be made at this point. Plumbing connections to hot and cold supply line can then be made after drop-in tub is secured to counter top.

3. In the installation of the DIT, DO NOT use the white washer in the installation process. Use of the white washer may cause the drain to seat improperly and cause water to pool around the drain area.

4. Set sink into place and assemble bracket, washer, and nut at-20-5/8" long. Test fit tub. File any areas which require widening. tachments (see Figure 2). Alternating from one to another, lighten mounting bracket assembly nuts.


4 1/4"

8 1/2"

13 9/16"

- 5. Some caulking residue may flow from under tub flange. This residue can be wiped clean following instructions on silicone or latex caulking tube.
- 6. Attach drain waste and faucet plumbing as desired.



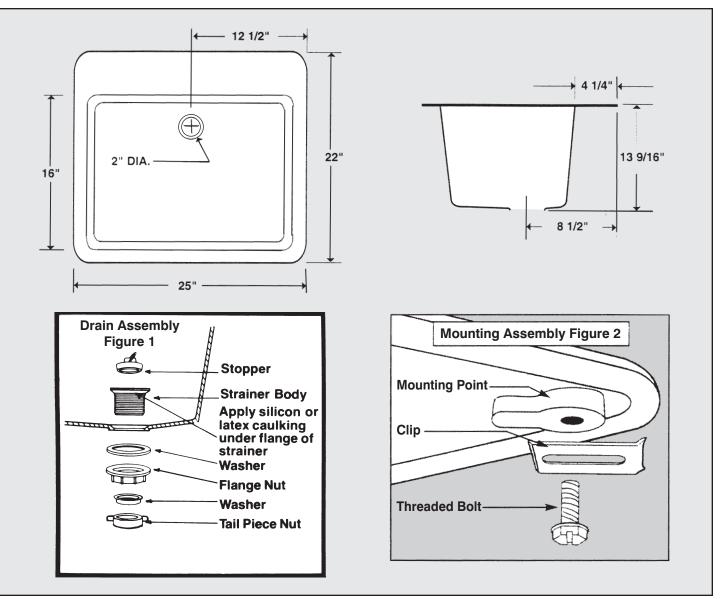

## Read ALL instructions carefully BEFORE starting your installation **SELF-RIMMING DROP-IN TUB - CAPACITY 17.50 GALLONS**

- 1. Measure and cut counter hole for tub insertion 23-5/8" wide x
- 2. After test fitting tub, remove from counter hole and install faucet (not included) and drain assembly (see Figure 1).

Helpful Hint .... for easy installation of final supply line connections, it is suggested that, if possible, plumbing connection to faucet be made at this point. Plumbing connections to hot and cold supply line can then be made after drop-in tub is secured to counter top.

In the installation of the DIT, DO NOT use the white washer in the 3. installation process. Use of the white washer may cause the drain to seat improperly and cause water to pool around the drain area.

## Installation Procedure for **MODEL DIT SELF-RIMMING DROP-IN TUB**

4. Set sink into place and assemble bracket, washer, and nut at-20-5/8" long. Test fit tub. File any areas which require widening. tachments (see Figure 2). Alternating from one to another, lighten mounting bracket assembly nuts.

- 5. Some caulking residue may flow from under tub flange. This residue can be wiped clean following instructions on silicone or latex caulking tube.
- 6. Attach drain waste and faucet plumbing as desired.