


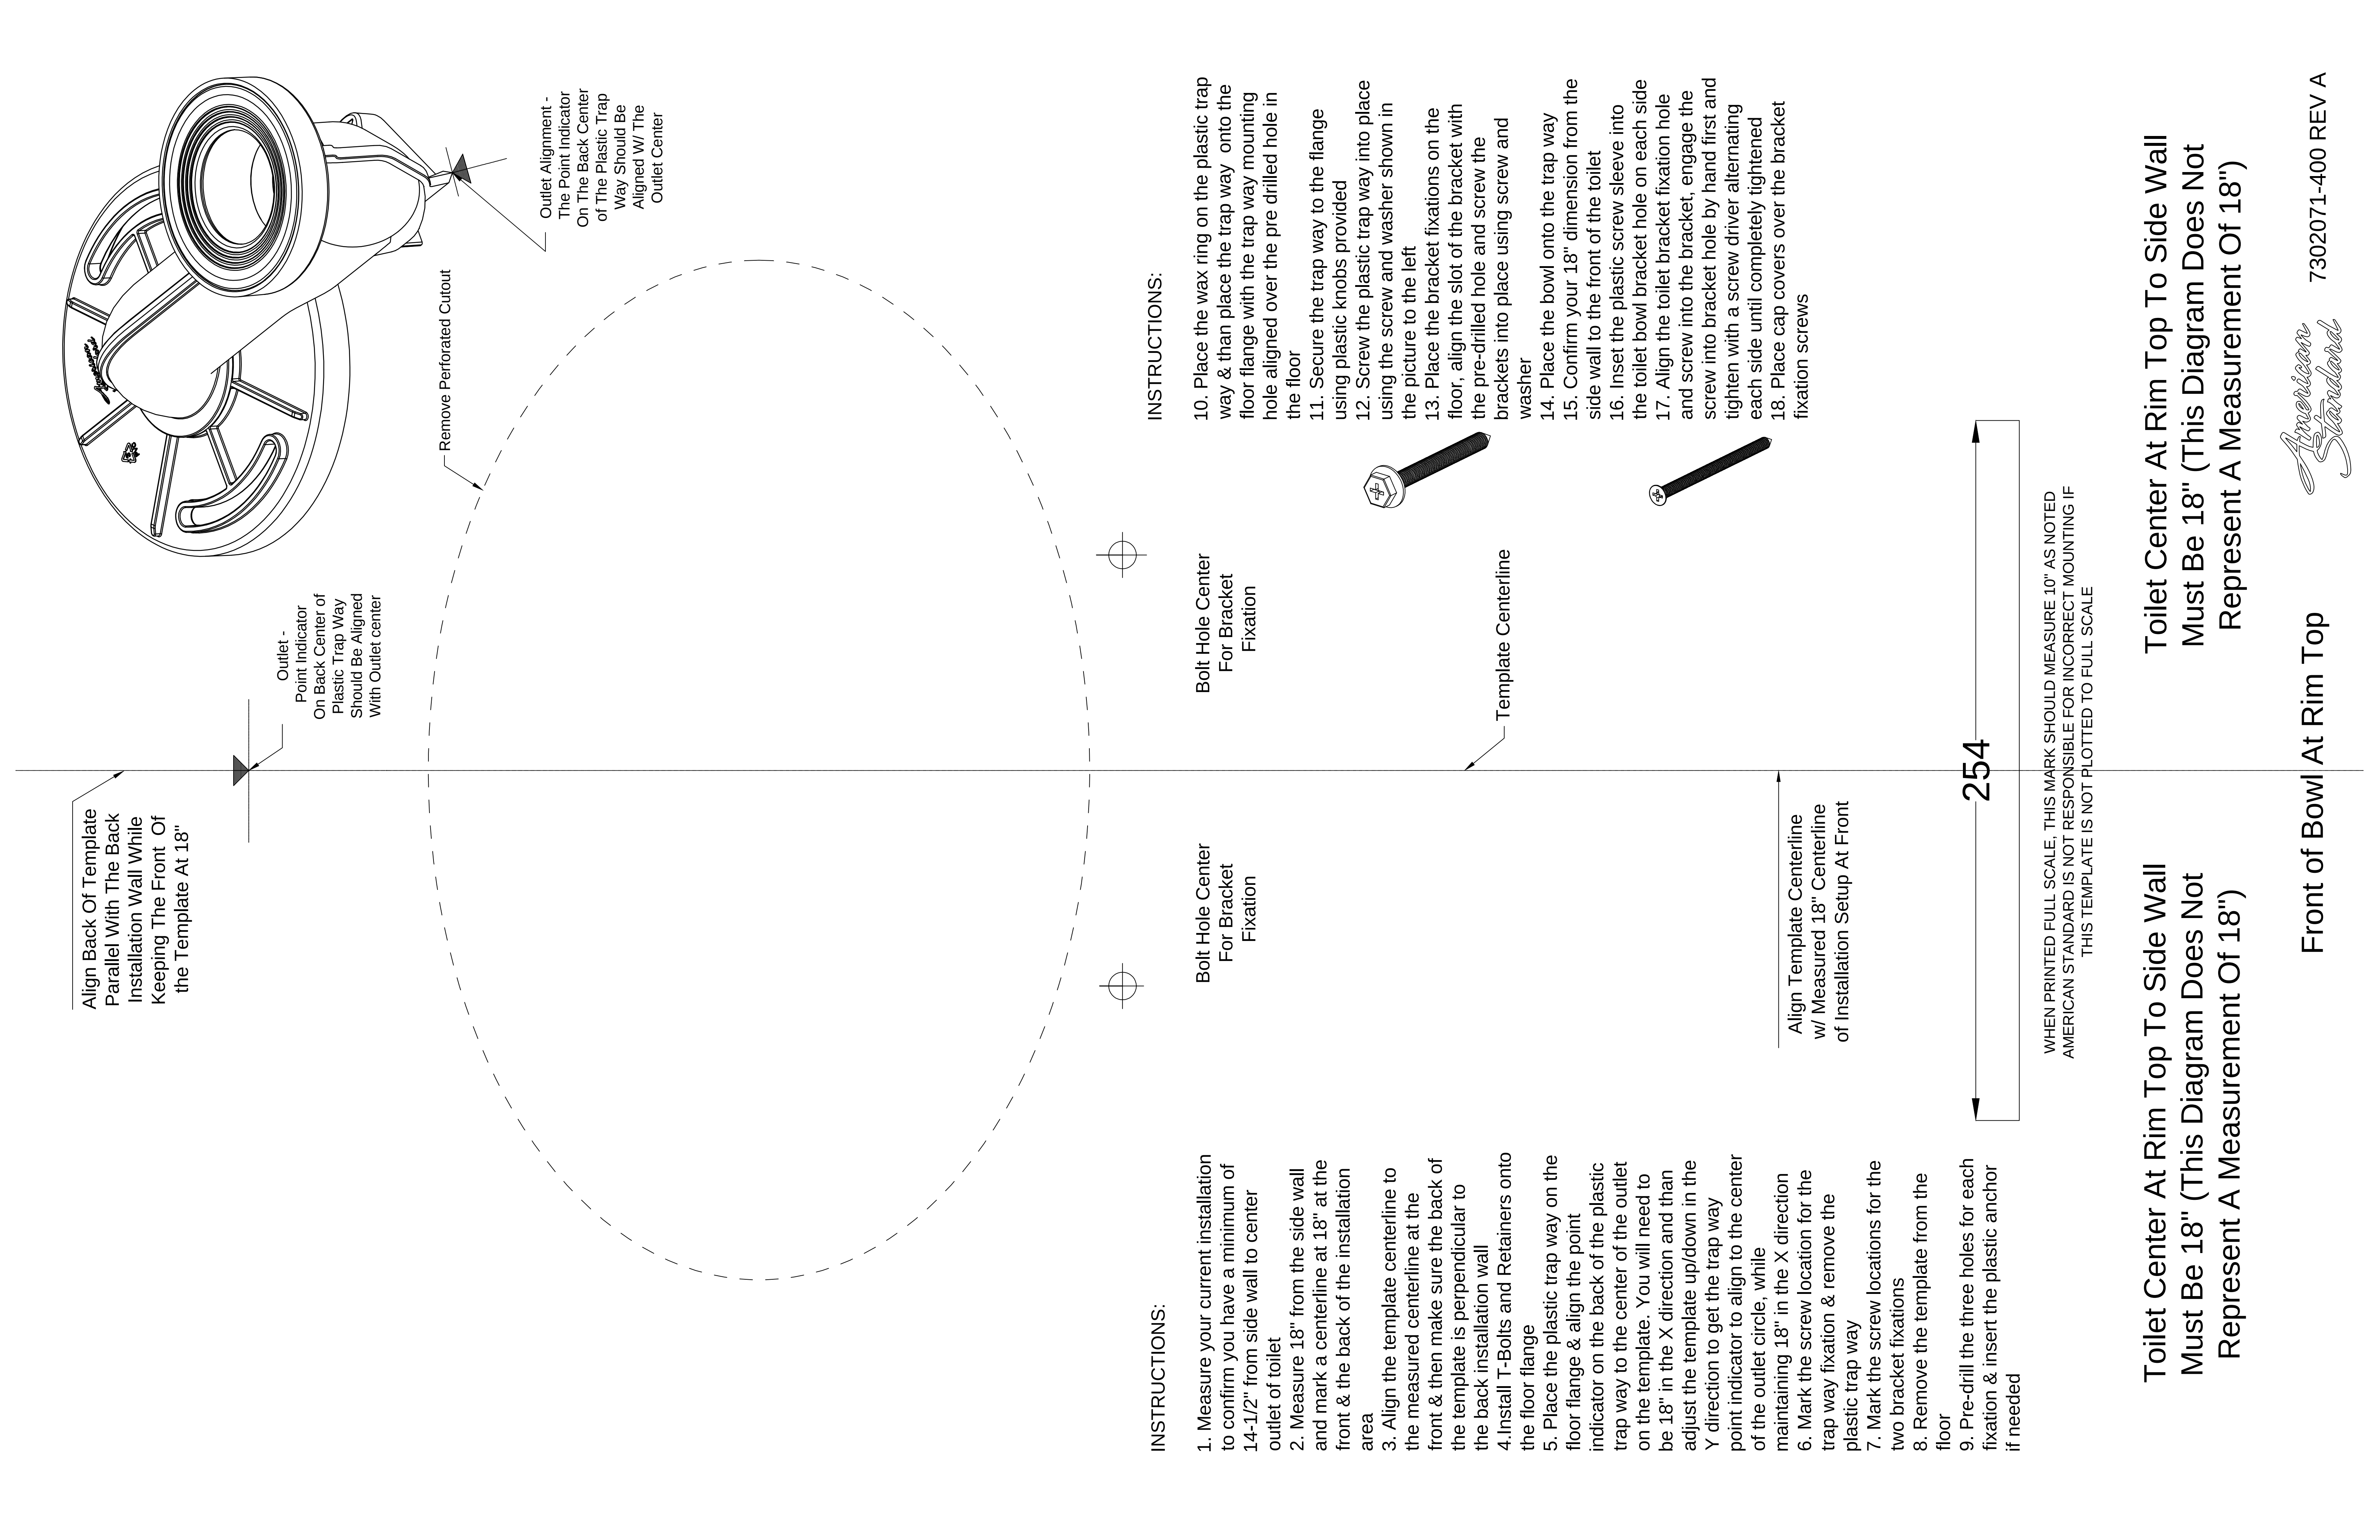

Align Back Of Template Parallel With The Back Installation Wall While Keeping The Front Of the Template At 18"

Outlet - Point Indicator On Back Center of Plastic Trap Way Should Be Aligned With Outlet center

Remove Perforated Cutout

Outlet Alignment - The Point Indicator On The Back Center Of The Plastic Trap Way Should Be Aligned W/ The Outlet Center

INSTRUCTIONS:

1. Measure your current installation to confirm you have a minimum of 14-1/2" from side wall to center outlet of toilet
2. Measure 18" from the side wall and mark a centerline at 18" at the front & the back of the installation area
3. Align the template centerline to the measured centerline at the front & then make sure the back of the template is perpendicular to the back installation wall
4. Install T-Bolts and Retainers onto the floor flange
5. Place the plastic trap way on the floor flange & align the point indicator on the back of the plastic trap way to the center of the outlet on the template. You will need to be 18" in the X direction and than adjust the template up/down in the Y direction to get the trap way point indicator to align to the center of the outlet circle, while maintaining 18" in the X direction
6. Mark the screw location for the trap way fixation & remove the plastic trap way
7. Mark the screw locations for the two bracket fixations
8. Remove the template from the floor
9. Pre-drill the three holes for each fixation & insert the plastic anchor if needed

INSTRUCTIONS:

10. Place the wax ring on the plastic trap way & than place the trap way onto the floor flange with the trap way mounting hole aligned over the pre drilled hole in the floor
11. Secure the trap way to the flange using plastic knobs provided
12. Screw the plastic trap way into place using the screw and washer shown in the picture to the left
13. Place the bracket fixations on the floor, align the slot of the bracket with the pre-drilled hole and screw the brackets into place using screw and washer
14. Place the bowl onto the trap way
15. Confirm your 18" dimension from the side wall to the front of the toilet
16. Inset the plastic screw sleeve into the toilet bowl bracket hole on each side
17. Align the toilet bracket fixation hole and screw into the bracket, engage the screw into bracket hole by hand first and tighten with a screw driver alternating each side until completely tightened
18. Place cap covers over the bracket fixation screws

Bolt Hole Center For Bracket Fixation

Bolt Hole Center For Bracket Fixation

Template Centerline

Align Template Centerline w/ Measured 18" Centerline of Installation Setup At Front

254

WHEN PRINTED FULL SCALE, THIS MARK SHOULD MEASURE 10" AS NOTED AMERICAN STANDARD IS NOT RESPONSIBLE FOR INCORRECT MOUNTING IF THIS TEMPLATE IS NOT PLOTTED TO FULL SCALE

Toilet Center At Rim Top To Side Wall Must Be 18" (This Diagram Does Not Represent A Measurement Of 18")

Toilet Center At Rim Top To Side Wall Must Be 18" (This Diagram Does Not Represent A Measurement Of 18")